

How to Use The EVO Smartport




1 Please visit <http://www.wickedlasers.com/evo> to download the app for your smartphone.

Remove the bottom metal panel to access the connection area for the Smartport.



2 Remove the jumper shown here before connecting the Smartport.

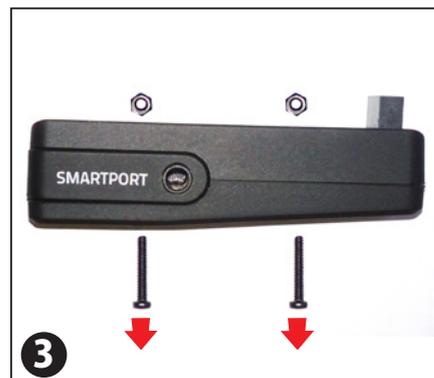

3 Remove the screws on the Smartport.



4 Connect the Smartport to the laser module section.



5 Use the two screws to secure the Smartport in place.


There are two options for connecting the Smartport with your device:

- 1) AV Cable
- 2) Bluetooth Accessory



6 <Option 1> Connect the AV cable to the Smartport.

Connect the other end of the AV cable to the headphone jack of your smartphone device then run the EVO laser app.

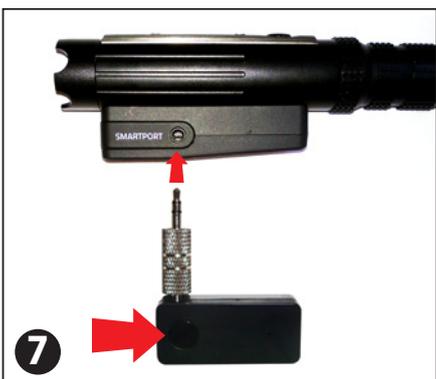

7 <Option 2> Connect the Bluetooth adapter to the Smartport and switch it on.

Pair the Bluetooth adapter with your smartphone device then run the EVO laser app.



8 Turn the laser on by pressing the button on the tail cap.



9 The laser will start in Continuous Mode by default. You may select other operating modes from the menu bar.

The main operating modes are Continuous, Momentary, Strobe and Fade.